



The Most Ingenious Pet Products On The Planet

Dura Flex®



INSTALLATION GUIDE



DURA FLEX

INSTALLATION FOR DOORS AND WALLS

Tools and Materials Needed:

1. #1 Phillips screwdriver
2. Electric jigsaw (for door installation)
3. Electric drill
4. Hollow Core Doors, Drywall and Stucco Installation: 1/4" drill bit
5. Solid Wood Door Installation: #21 (.159") drill bit
6. Level
7. Safety Glasses

Parts Included:

1. Main Door Assembly. *Wall models include aluminum wall tunnel.
2. Outside Bezel
3. Security Panel
4. Mounting Screws: #10 x 1-1/4" Long, Phillips Oval Head, Stainless
5. Screw Quantities: Small (22), Medium (26), Large (32), X-Large (32)
6. Screw Anchors for included screws.
7. Anchor Quantities: Small (22), Medium (26), Large (32), X-Large

Installation Steps:

1. Measure your dog's shoulder height.
2. The top of your rough cut-out should be 4" higher than your dog's shoulder height.
3. The rough cut-out must be a minimum of 3" above floor surface.

****Refer to figure #1 on the following page.***

4. Using a level for the top edge, draw the rough cut-out rectangle on your door or wall using the size chart below. *- Continued*

Pet Height Diagram


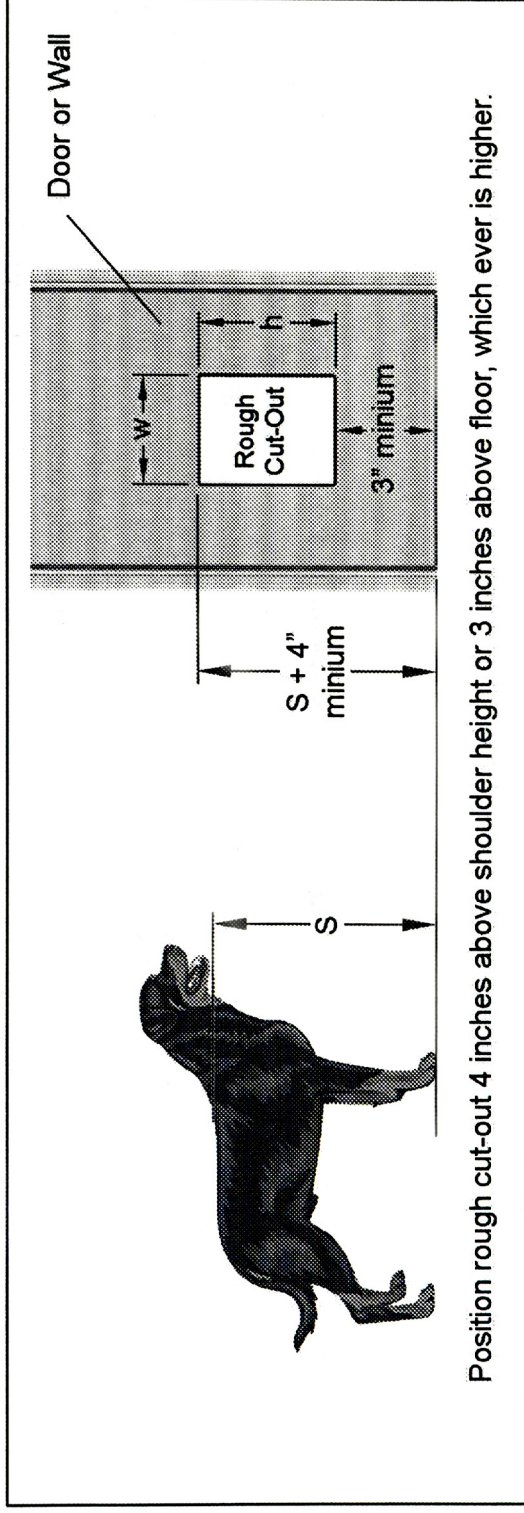


figure #1

| Rough Cut-Out Dimensions | | |
|--------------------------|-----------|------------|
| Pet Door Size | Width "w" | Height "h" |
| Medium | 11 1/4" | 20 1/8" |
| Large | 13 1/4" | 24" |
| Extra Large | 15 1/2" | 27 7/8" |

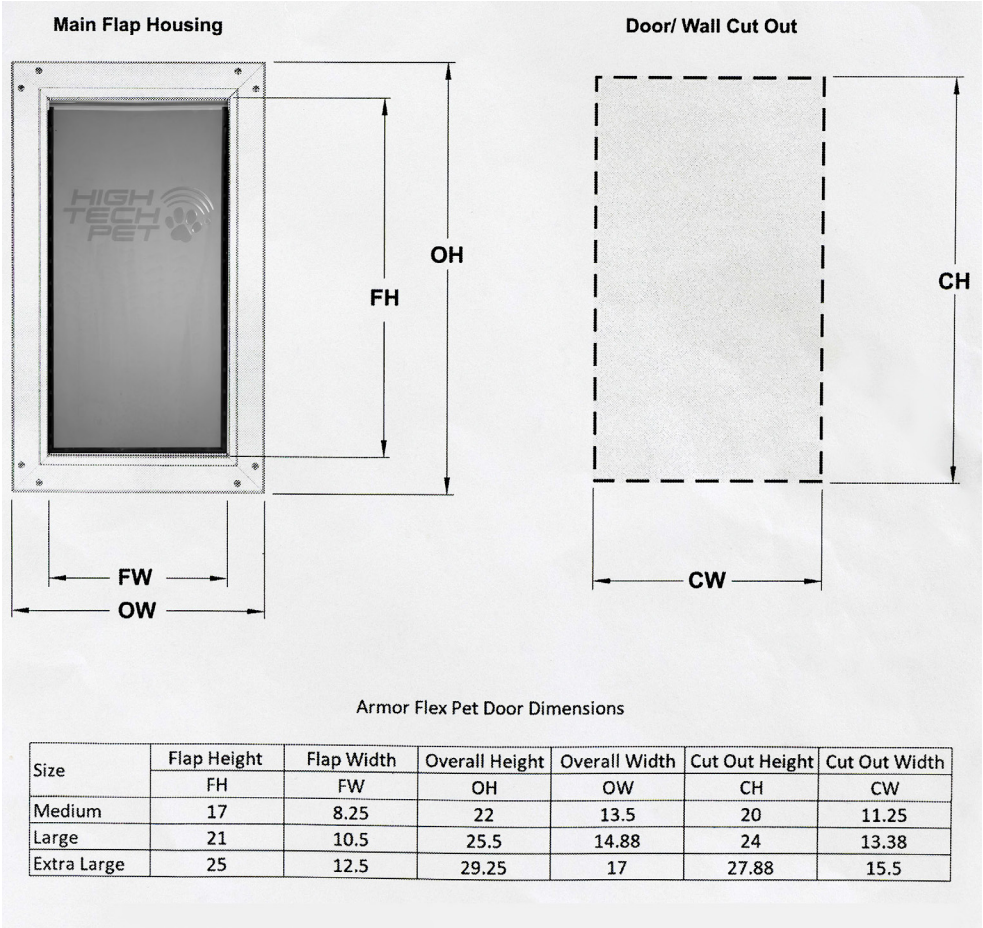


Installation Continued

5. Door Installations: Drill a 3/8" hole on the inside of each corner.
6. Saw Selection : ***Jigsaw*** for doors. ***Circular Saw*** for wall installations. **Use a masonry saw blade for stucco walls.*
7. Place the bezel in the opening you cut in the outside of your door or wall. Then trace each mounting hole circle with a pencil.
8. Remove the bezel and drill a mounting hole in the center of each circle you traced. The screw anchors included are recommended for hollow core doors, stucco, and drywall. If you are planning to use the screw anchors, drill the holes with a 1/4" drill bit. If you will be screwing directly into a solid wood door use a size #21 (.159") drill bit.
9. For hollow core doors and stucco, insert a screw anchor in each hole on the outside of your door or wall.
10. Reinstall the bezel and screw it into place using the Mounting Screws provided.
11. With the bezel in place, insert the Main Door Assembly into the inside of the opening you made in your door or wall. Then, trace each mounting hole circle with a pencil.
12. Remove the Main Door Assembly and drill a mounting hole in the center of each circle you traced. A 1/4" drill bit if you are using the screw anchors. If you will be screwing directly in to a solid wood door use a size #21 (.159") drill bit.
13. Insert a screw anchor into each hole, when required.
14. Reinstall the Main Door Assembly and screw it into place using the Mounting Screws provided.
15. Insert the Security Panel into the Main Door Assembly as needed.

***Thank you for purchasing the Dura Flex energy efficient pet door.
We appreciate you and your pets!***

***Optional Weather Proofing Step:**

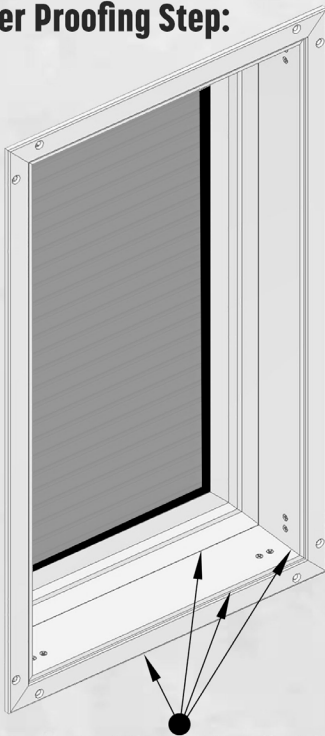

Caulk Joints With Clear Silicon Caulk After Installation.

Dura Flex Replacement Flaps

Medium:

FLP-3M



Large:

FLP-3L



X-Large:

FLP-3XL



Help is just a call away!

We've got you. For general questions about your new door and technical support call us at 1-800-255-1279
Monday-Friday 6:30 am - 4:00 pm PST

www.hightechpet.com

CAUTION: As with any pet door, supervision of your pet is advised. Failure to do so could result in harm to your pet. Please be sure to provide water and shade outside in the rare event that your pet door were to malfunction.



High Tech Pet Products, Inc.

*2111 Portola Rd.
Ventura, CA 93003*

www.hightechpet.com

